



- Steep-sloped, water-shedding roofs include shingles, tiles, architectural standing seam metal panels, and treated or untreated wood shakes.

The fundamental difference between low- and steep-sloped roof covers is that low-sloped roof covers provide an impervious barrier to prevent water buildup from seeping into the building, whereas steep-sloped roof covers act like a raincoat to shed water.

## HIGH WIND PROTECTION

While many people associate severe windstorms with coastal regions, wind uplift should be considered when selecting roof covers in all locations due to the threat of straight-line winds, strong thunderstorms and severe winter storms in many inland areas. At a minimum, wind-rated roof cover systems should be installed in accordance with design requirements in the local building codes. However, local design requirements frequently do not provide much of a safety factor for wind uplift resistance. IBHS and several organizations that provide wind ratings for roof covers recommend a wind load safety factor of 2.0. Additional resilience also can be achieved by increasing the local design wind speed requirements by 20 mph in the building's design.

This, and the additional wind resistance guidelines below, can be found in IBHS' FORTIFIED for Safer Business™ (FFSB) standard, a code-plus framework for implementing additional levels of hazard resilience to better protect commercial structures.

- Low-sloped roof covers should have one or more of the following wind-rated product approvals: FM Approvals 4470 or ANSI FM 4474; Miami-Dade County Approved (MDCA) with current Notice of Acceptance; Florida Product Approval that meets FM Approvals Standard; or Texas Department of Insurance "Product Evaluation Index for Roof Coverings" that meets FM Approvals Standard.

- Steep-sloped roof covers, such as clay and concrete tiles, should meet the requirements of the location's design wind speed and exposure category. Steep-sloped roofs with shingles should be high-wind rated based on that location's design wind speed and exposure category, as well as meet the ASTM test standards included in the following chart:

ASCE 7-05 Wind Speed ( $V_{asd}$ )	ASCE 7-10 Wind Speed ( $V_{ult}$ )	Shingle Wind Testing Standard/ Classification
100 MPH	129 MPH	ASTM D3161 (Class F) or ASTM D 7158 (Class G or H) <sup>1</sup>
110 MPH	142 MPH	ASTM D3161 (Class F) or ASTM D 7158 (Class G or H) <sup>1</sup>
120 MPH	155 MPH	ASTM D 7158 (Class G or H) <sup>1</sup>
130 MPH	168 MPH	ASTM D 7158 (Class H) <sup>1</sup>
140 MPH	180 MPH	
150 MPH	194 MPH	

<sup>1</sup> **Note:** When used in Exposure D locations, IBHS recommends shingles pass both ASTM D3161 Class F and ASTM D7158 Class H testing standards.



A wind screen on a low-sloped ballasted roof concealing rooftop equipment from the street and neighboring buildings.


## HAIL PROTECTION

Damaging hail can occur in many regions of the country, as shown in Figure 1. Impact-resistant roof cover products generally perform better than basic products of the same roof cover type when subjected to hail storms, and are recommended for these regions. The roof cover products should meet the following standards:

- For low-sloped roofs, FM Approvals Standard 4470 Class 1-SH, or UL 2218 Class 4; and
- For steep-sloped roofs, FM Approvals Standard 4473 Class 4, or UL 2218 Class 4.

Additionally, a cover board in a low-sloped roof system can increase protection against hail impacts, and help reduce the wear and tear of foot traffic on built-up, modified bitumen, and single-ply membrane roof covers. Transitions between rooftop equipment, parapets, curbs and other elevated roof components are most vulnerable to hail impact damage due to the lack of underlying support.

Hail guards that often resemble chicken wire also are recommended in order to protect air conditioner condenser fins, air intakes such as fans, and any other vulnerable components. Completely surrounding these units with this type of protection also is an option, as long as it does not impede the performance of the unit.

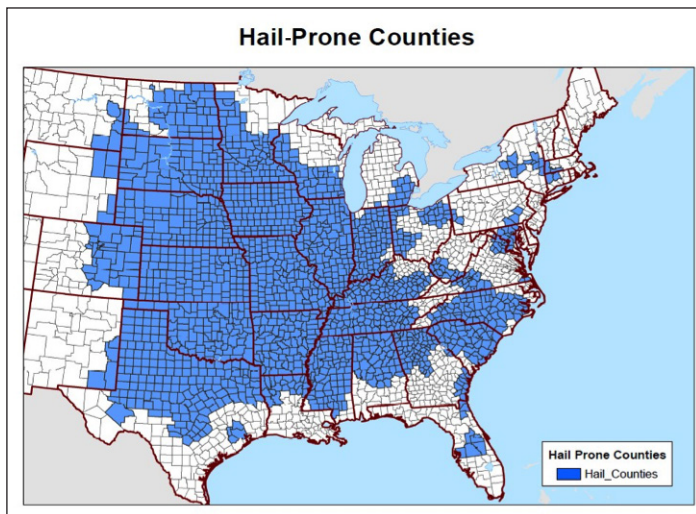

**Figure 1:** The highlighted hail-prone counties are based on hail reports compiled by the Storm Prediction Center. Counties in blue are subject to a high frequency of damaging hailstorms with a maximum hail stone size of 1 in. or larger. Source: IBHS

## WILDFIRE AND OTHER EXTERNAL FIRE PROTECTION

Although wildfires in western states receive a lot of media attention, wildfire risks exist in almost every state in areas where people and vegetation live in close proximity. In fact, commercial habitational buildings often are located in suburban areas, with designated conservation/preservation areas in and around the complexes. This type of land use planning can create increased exposure to wildfire, especially in typically dry and drought-stricken areas. While direct exposure to wildfire flames and radiant heat can be the source of ignition, burning embers associated with wildfires can travel significant distances and land on roofs or be blown into vents, resulting in substantial property damage.

To address the level of roof cover protection provided against wildfire risks, fires from nearby buildings, and other external fire risks, roof covers are specifically rated as Class A, Class B, Class C, or unrated, based on testing to ASTM E-108, UL 790 or FM 4470 standards. A roof cover system rated Class A provides the best protection from wildfire or ember ignition, while an unrated roof is the most vulnerable.

- For low-sloped roofs, Class A roof cover systems typically include built-up, modified bitumen, single-ply membranes, stone ballasted, and various hybrid covers. These roof covers are rated based on the materials that make up the entire roof cover assembly.
- Common Class A roof coverings for steep-sloped roofs include asphalt fiberglass composition shingles and concrete or clay tiles. As with low-sloped roofs, some steep-sloped roof cover materials have a “by assembly” Class A fire rating, meaning additional materials must be used between the roof covering and the roof sheathing in order to attain the fire rating. Examples of steep-sloped roof coverings with a “by assembly” fire rating include aluminum, some fire-retardant wood shake products, and recycled plastic and rubber products.

Unrated roofs include non-fire retardant treated wood shakes or shingles. If a building has a wood shake roof and there is no available documentation that specifies the fire rating, the owner should assume it is unrated, although this can be verified by a professional roof inspection.

For additional protection, noncombustible gutters also should be used in wildfire-prone areas. See IBHS’ article at [www.disastersafety.org/wildfire/vents/](http://www.disastersafety.org/wildfire/vents/) for recommended vent protection information.

# Fire Walls

In order to prevent a fire from spreading through and above connecting units and buildings, a fire wall is constructed between units from the foundation to at least 30 inches above adjacent walls. These fire walls are typically two or three hour-rated in their protection, depending on the IBC Residential Group classification.



*Fire wall separating two buildings – reducing the risk of a fire jumping from one roof to another*

## PREVENTIVE MAINTENANCE

The best way to avoid roof-related problems and strengthen a roof's weather resistance is through regular care and preventive maintenance. Proper maintenance also prolongs the life of a roof and in many instances will allow for repair instead of replacement, when a problem is identified. The frequency of inspections for routine maintenance depends on several factors, including the age of the roof, recent weather events, rooftop foot traffic, roof and rooftop equipment-related work, surrounding vegetation, and conditions identified during previous inspections. Scheduling inspections every six months (fall and spring) is an effective way to make sure they are not forgotten in the press of other important business.

IBHS is a non-profit applied research and communications organization dedicated to reducing property losses due to natural and man-made disasters by building stronger, more resilient communities.

Routine maintenance such as removing debris and combustible materials accumulating on roofs, gutters and around the structure also can significantly reduce risks from weather hazards and degradation of some types of roof covers.

While some signs of serious problems may be apparent from inside the building (e.g., water stains on a ceiling), it's also important to visually inspect the roof itself to look for problems that are likely to worsen over time. Depending on the slope of the roof and the ease of access, inspections sometimes can be done by the building owner, but in many cases, it makes sense to hire a contractor to confirm the job is done safely and correctly. Signs of roof cover problems include prolonged standing water that promotes bacterial growth on a low-sloped roof, bubbles possibly indicating trapped moisture, tears in the roof cover or cracked seams, and loose roof cover edge flashing. All inspections should look for and develop a repair plan for identified problems.

Additional IBHS roof cover inspection and maintenance guidance can be found at:

- [www.disastersafety.org/disastersafety/roof-protection-begins-at-the-edge](http://www.disastersafety.org/disastersafety/roof-protection-begins-at-the-edge)
- [www.disastersafety.org/commercial\\_maintenance/evaluating-the-roof](http://www.disastersafety.org/commercial_maintenance/evaluating-the-roof)
- [www.disastersafety.org/commercial\\_maintenance/protection-from-the-top-the-importance-of-commercial-roof-cover-maintenance-and-repair](http://www.disastersafety.org/commercial_maintenance/protection-from-the-top-the-importance-of-commercial-roof-cover-maintenance-and-repair)

## SUMMARY

Roof covers are the first line of defense for any kind of building against the elements and a vital protection for the people living inside. Physical property damage from natural and manmade exposures, as well as loss of the buildings' use, can be greatly reduced if appropriate roof covers for habitational buildings are selected, properly installed, and maintained. Many of the resiliency best practices included in this article, as well as additional roof cover information, can be found in IBHS' FORTIFIED for Safer Business Standards™ at: [www.disastersafety.org/fortified/fortified-for-safer-business-standards](http://www.disastersafety.org/fortified/fortified-for-safer-business-standards).

**Insurance Institute for Business & Home Safety**  
4775 East Fowler Ave.  
Tampa, FL 33617  
(813) 286-3400  
DisasterSafety.org